**Technical Manual** 



# 01.010.01

#### REMOVE AND INSTALL

#### **REAR FENDER**

#### STARK FUTURE




## SAFETY WARNINGS

Observe your local health and safety guidelines. Ensure a safe working environment. Wear appropriate protective gear. Deviating from the prescribed order may result in injury or damage to the products.



### TOOLS

- **TRX 30**
- TRX 45





## **OPERATION TIME**

## 12 Minutes

#### 2

# REMOVAL



## WARNING

Before proceeding with any work on the bike, make sure it is turned off and the charger disconnected.

**1** Remove the spoiler assembly. Refer to:



01.007.01

## Remove and Install spoiler assembly 7.

- **2** Unscrew the wiring bracket screw.
- **3** Unscrew the rear fender bolts, 2x on each side and 2x inside the fender.
- **4** Remove the rear fender.



## NOTE

Ensure to free the wiring from the bracket and note the mud flap attached to the rear fender.

## З

# INSTALLATION



## WARNING

Before proceeding with any work on the bike, make sure it is turned off and the charger disconnected.

**1** Install the rear fender in place.

NOTE

Take caution not to damage the mud flap attached to the rear fender.

- 2 Tighten the inside bolts by hand until the fender is secured in place.
- 3 Tighten all 4 bolts to 5 Nm.




## NOTE

Take caution to fit the wiring in the correct position to avoid pinching any wires.

#### 4

- 4 Tighten wiring bracket wiring screw to 3 Nm.
- 5 Install the spoiler assembly. Refer to:

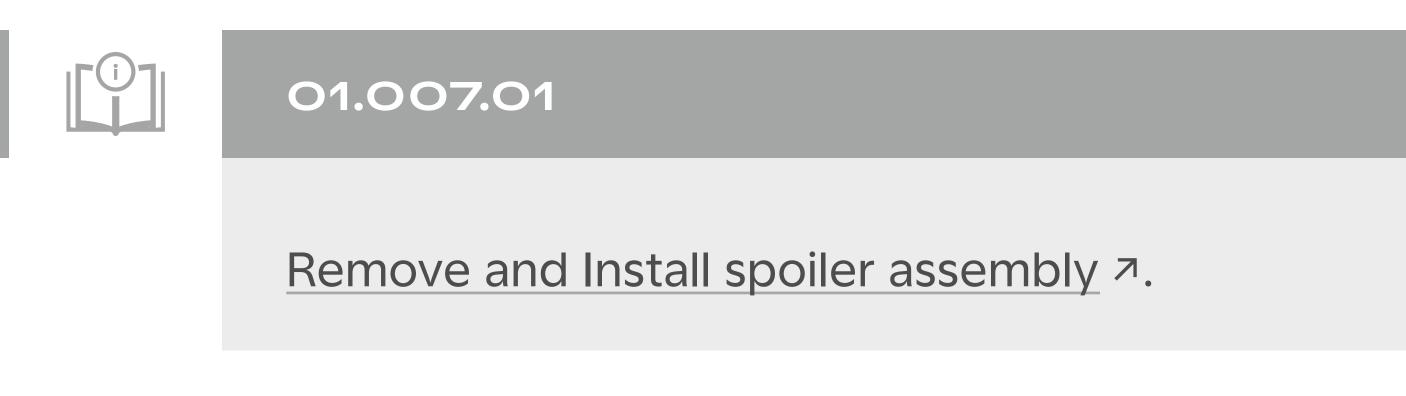

### 5

# starkfuture.com

ENG 2023-06 Copyright © 2023 Stark Future SL. All rights reserved. Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

#### STARK FUTURE