

Technical Manual



05.015.01

**REMOVE AND INSTALL
FOOT PEG**

STARK FUTURE




SAFETY WARNINGS

Observe your local health and safety guidelines. Ensure a safe working environment. Wear appropriate protective gear. Deviating from the prescribed order may result in injury or damage to the products.



TOOLS

TRX 45

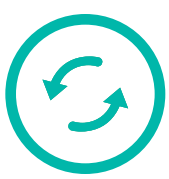

CONSUMABLES

- Lithium grease
- Medium strength thread locker



OPERATION TIME

5 Minutes

REMOVAL



WARNING

Before proceeding with any work on the bike, make sure it is turned off and the charger disconnected.

- 1 Remove the spoiler assembly. Refer to:



01.007.01

[Remove and Install spoiler assembly ↗.](#)

- 2 Unscrew carbon fiber spoiler assembly bolts, 3x on each side.



NOTE

Take caution not to lose any black spacers when removing the bolts.

- 3 Grab the carbon fiber spoiler assembly from the sides and pull backward and upward.

INSTALLATION



WARNING

Before proceeding with any work on the bike, make sure it is turned off and the charger disconnected.



NOTE

Check that the carbon fiber spoiler assembly fittings on the bike are clear of wirings or debris.

- 1 Slide the carbon fiber spoiler assembly forward and downward.



NOTE

Ensure to insert the black spacers with the bolts.

- 2 Tighten the carbon fiber spoiler assembly bolts to **8 Nm**.
- 3 Install the spoiler assembly wiring screw to **3 Nm**.

4

4 Install the spoiler assembly. Refer to:



01.007.01

[Remove and Install spoiler assembly ↗.](#)

5

05.015.01

Remove and install foot peg

starkfuture.com

ENG 2023-06

Copyright © 2023 Stark Future SL. All rights reserved.
Reproduction, even in part, as well as copying of all kinds,
is permitted only with the express written permission
of the copyright owner.

STARK FUTURE